



# ASNU TIPS


65 – 67 Glencoe Road, Bushey, Herts, WD23 3DP UK

Tel: (44) 208 420 4494

E-Mail: [enquiries@asnu.com](mailto:enquiries@asnu.com) Web: [www.asnu.com](http://www.asnu.com)

(10/2022)

## Siemens Piezo Injector – Filter Removal & Re-fit

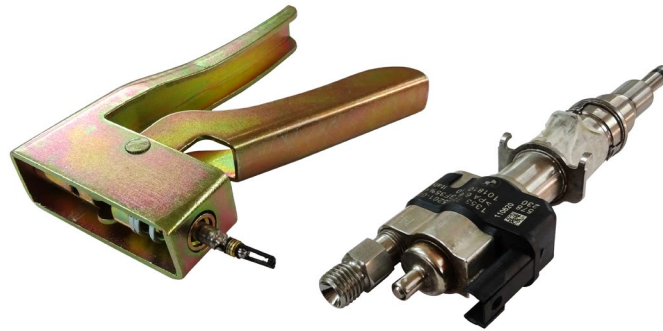

1. Undo grub screw on the ASNU 84 Tool

2.



3. Piezo filter location is further inside

4.

Re-Fit grub screw using the dimple in the higher position on the pin



5. Remove the filter as you would any other injector and inspect it for damage

6. Place the new ASNU 219 filter in the top of the injector

7. Using a vice with soft jaws and the ASNU 219T tool, gently squeeze together to lock the filter in position. See our video link for this:

<https://youtu.be/pNAuBLpr3Fg>

**Important Tip: If the filter that you remove has broken up, there's a good chance those parts have gone into the injector and may cause blockages & restrictions, resulting in leakage or the injector being stuck open or closed. We would recommend replacing the injector if this is the case.**